


2265 UPDATE INSTRUCTIONS via USB Flash Drive

1. Unzip the downloaded update package to a location on your computer's C: drive or on your computer's Desktop.
2. Make sure that there are no other files or folders are stored on the USB Flash Drive, it must be empty. The USB Flash Drive must be FAT-32 formatted.
3. Copy or drag & drop the update file "**main.dat**" in the root directory of the USB Flash Drive. **Do not change the name of the update file.**

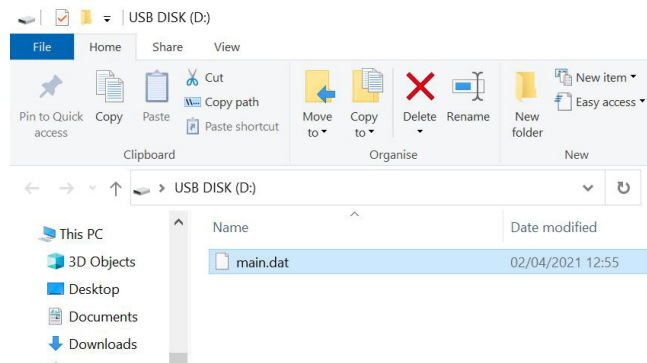

4. Ensure the 2265 is switched OFF.
5. Insert the USB Flash Disk into the USB port at the back of the 2265.




6. Switch ON the 2265. The update will run automatically. When update is finished, restart the 2265, it will show the new software version during start up.

UPDATE FINISHED


FORMATTING A USB FLASH DRIVE

PC (WINDOWS):

1. In “This PC”, look for the USB Flash drive and right click on the SD card symbol. A selection box opens, select “Format”.

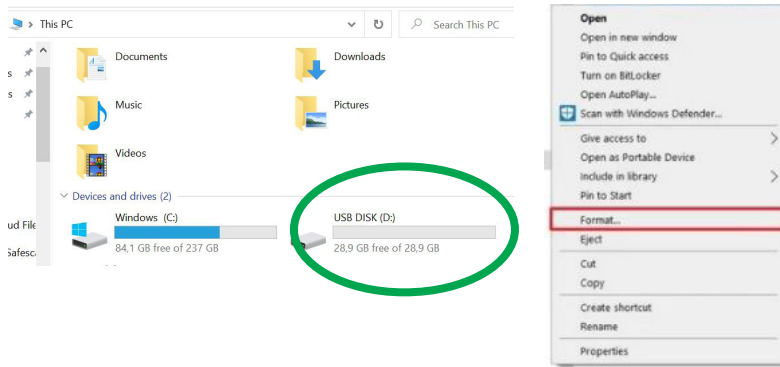

2. Select “FAT32” file system, then press [Start].. Windows will prompt you to confirm all data on the SD-card will be erased. Press [OK] to confirm, formatting will start.

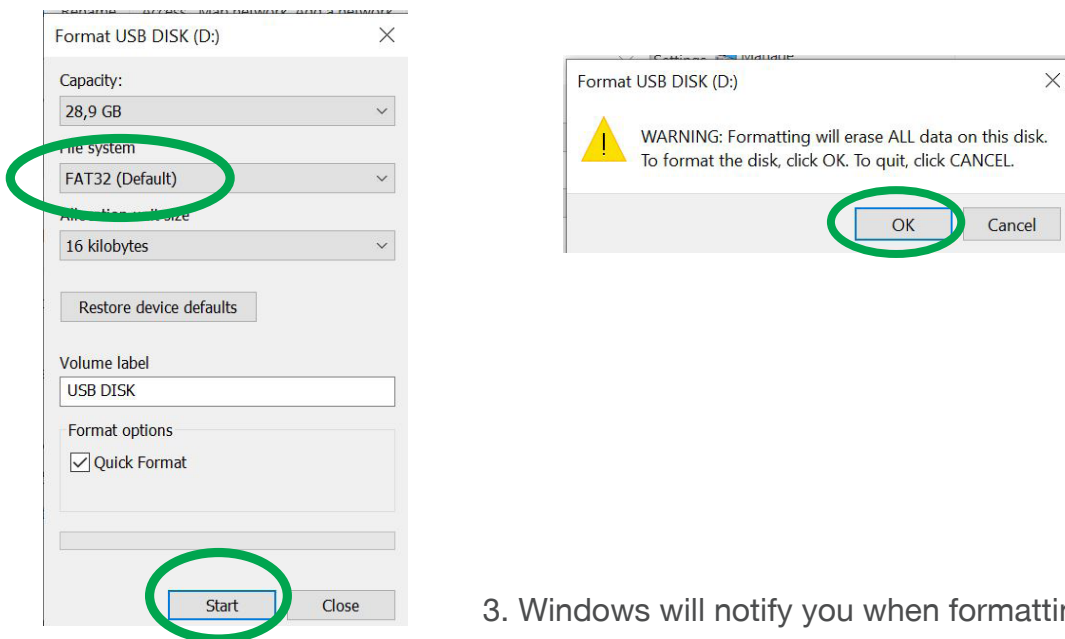

3. Windows will notify you when formatting has finished.

MAC:

1. Select the USB Flash Drive and go to the Disk Utility. Select “Erase” to format the USB drive, make sure to select “Fat-32” file system.

