



## 2. UPDATING YOUR SAFESCAN DEVICE WITH AN SD CARD

### 2.1 SAFESCAN 2985-SX BANKNOTE COUNTER

1. Switch off the power of your banknote counter.
2. Insert the SD card with the software update into the SD card slot at the back of the device.

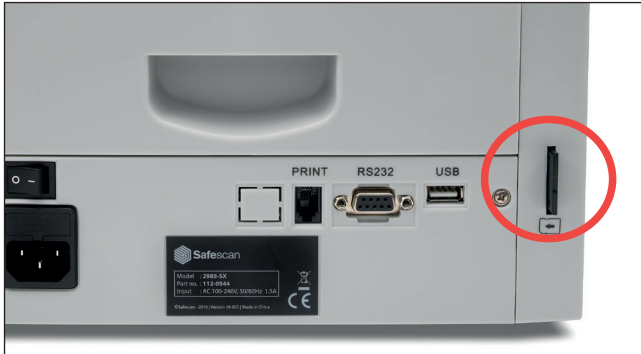

3. Switch on the device. The SD card will automatically be detected. The display will show the following:

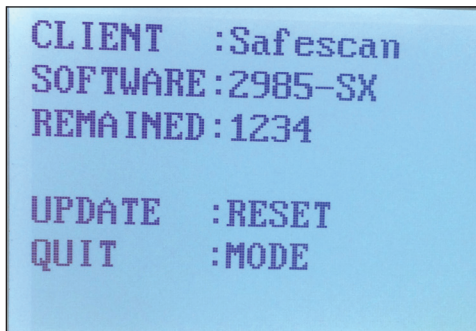

4. Press the [Start / Reset] button to start the update process.



During the update, the display will show the progress and status of the update. When update is finished, you will be prompted to restart the banknote counter, to finish the update. After restarting, the display will show the new software version number.