



# **Safescan**

## **Currency update tool**

# Safescan Currency update tool

Thank you for choosing Safescan currency update tool. Before using the software, read this manual thoroughly in order to familiarize yourself with the functions and operations.

---

 
## 1.0 Installation

Open the file: **Currency update tool Setup.exe**



Currency update tool Setup.exe


The installer starts...

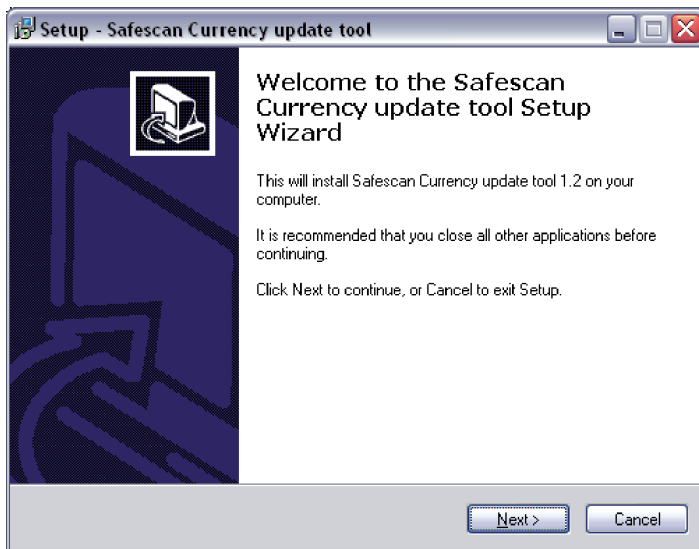


After closing all other applications press [Next >]

The Selection destination location screen will appear. Press [Next >]

 
Or change the destination folder and then press [Next >]

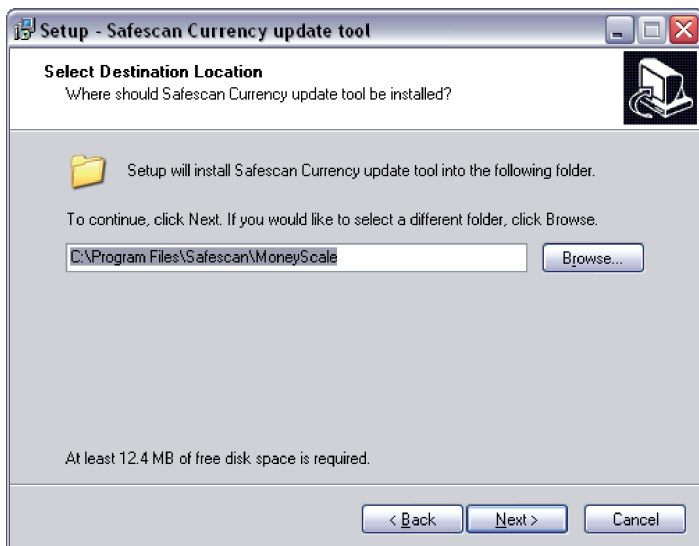

 Then choose the location were to place the program's shortcut and press [Next >]

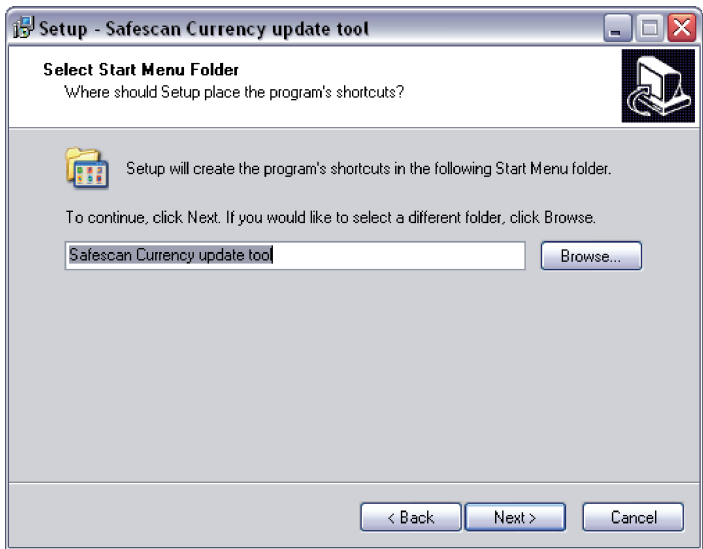

 Press [Install] to start the installation.

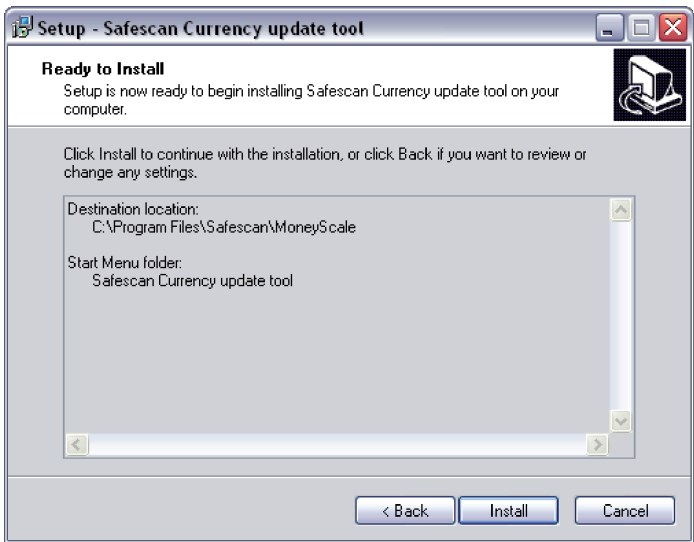


Press [Finish] to complete the installation.



## 2.0 MAIN SCREEN

 After opening the application the main screen appears:

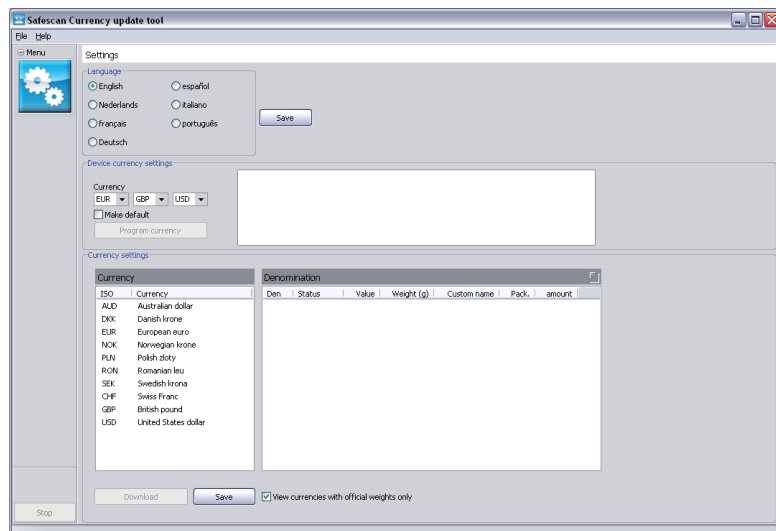

## 2.1 LANGUAGE

Select language and press [Save]

### 3.0 DEVICE CURRENCY SETTINGS


With this application it is possible to adjust your Safescan 6100 device to your needs. Selecting and loading other currencies, activating or deactivating denominations or loading user-modified denomination weights on the device.


#### 3.1 LOADING CURRENCIES ON YOUR SAFESCAN DEVICE


The device contains 3 currency positions. In the Settings menu you are able to easily upload every available currency of the world!

Connect the Safescan device to your PC with the enclosed USB cable and Power ON the device. (Make sure the device is connected with the adapter or 9v battery)

**Safescan 6100:** The screen displays LOAD.

**Safescan 6150/6155:** Press and release  then press and release **+** on the device. The screen will display |USB-PC|

 Press  to open the *Settings menu* and go to *Device currency* settings field.

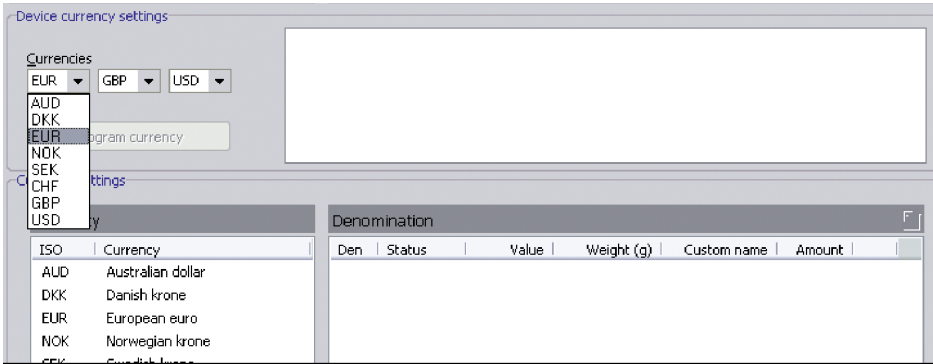

The screenshot shows the 'Device currency settings' window. On the left, there are three currency selection dropdowns labeled 'EUR', 'GBP', and 'USD'. Below them is a 'Program currency' button. To the right of these is a large empty rectangular box. Below the currency dropdowns is a 'Settings' button. At the bottom, there is a table with the following columns: 'Den', 'Status', 'Value', 'Weight (g)', 'Custom name', and 'Amount'. The table is currently empty.

Select a currency for every position from the 3 pull down menu's. When finished selection press **[Program currency]** to upload the currencies to the Safescan device. Check the message box if the currencies were programmed correctly.


**Safescan 6100:** After loading new currencies on the device the screen will remain displaying LOAD. Disconnect USB cable. The device will Power Off. When restarting the device the new currencies will be loaded

**Safescan 6150/6155:** After loading new currencies the device will automatically disconnect and return to counting mode.

### 3.2 LOADING CURRENCIES ON THE SAFESCAN DEVICE AS DEFAULT SETTINGS.

 (not available for Safescan 6100)

To load currencies as default currencies on the Money counter select the box: 'Make default'. If the Money counter will be set back to default settings the programmed currencies will appear.

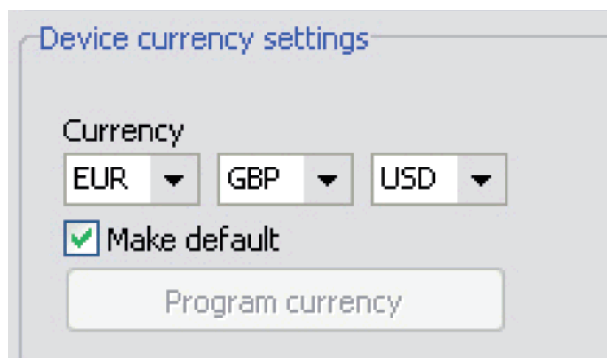

Device currency settings

Currency

EUR GBP USD

☒ Make default

Program currency

# 4.0 CURRENCY SETTINGS

In this menu it is possible to make some advanced settings such as:  
Changing denomination weights, entering custom denomination names,  
adding coin rolls/bags, adding cheques or other non-cash values  
(Not available for Banknote counters)

Currency settings

ISO	Currency
AUD	Australian dollar
DKK	Danish krone
EUR	European euro
NOK	Norwegian krone
PLN	Polish zloty
SEK	Swedish krona
CHF	Swiss Franc
GBP	British pound
USD	United States dollar

EUR European euro

Den	Status	Value	Weight (g)	Custom name	Pack.	amount
	on device and PC	0,01	OK		Roll	50
	on device and PC	0,02	OK		Roll	50
	on device and PC	0,05	OK		Roll	50
	on device and PC	0,10	OK		Roll	40
	on device and PC	0,20	OK		Roll	40
	on device and PC	0,50	OK		Roll	40
	on device and PC	1,00	OK		Roll	25
	on device and PC	2,00	OK		Roll	25
	on device and PC	5,00	OK			
	on device and PC	10,00	OK			
	on device and PC	20,00	OK			
	on device and PC	50,00	OK			
	on device and PC	100,00	OK			
	on device and PC	200,00	OK			
	on device and PC	500,00	OK			

Other value

Value	Description
-------	-------------

Download

Save

☒ View currencies with official weights only

**WARNING: Changing currency statistics can influence counting results**

View currencies with official weights only

Deactivating this box will show all available currencies. This means official and unofficial weights. Unofficial weights are currencies for which no official weights are currently entered in the software.

Some currencies have multiple versions of the same denomination. (old and new versions)



If there are more than one existing versions of a denomination the version numbers are shown in the currency settings menu. The oldest denomination will be named version 1.

A new issued denomination will be named version 2, and so on.

Currency settings						
Currency		BRL Brazilian real				
ISO	Currency	Den	Status	Value	Version	Weight (g)
AUD	Australian dollar		on device and PC	0,01	1	OK
BRL	Brazilian real		on device and PC	0,01	2	OK
BGN	Bulgarian lev		on device and PC	0,05	1	OK
DKK	Danish krone		on device and PC	0,05	2	OK
EUR	European euro		on device and PC	0,10	1	OK
HUF	Hungarian forint		on device and PC	0,10	2	OK
NOK	Norwegian krone		on device and PC	0,25	1	OK
PLN	Polish zloty		on device and PC	0,25	2	OK
RON	Romanian leu		on device and PC	0,50	1	OK
SEK	Swedish krona		on device and PC	0,50	2	OK
CHF	Swiss Franc		on device and PC	0,50	3	OK
GBP	British pound		on device and PC	1,00	1	OK
USD	United States dollar		on device and PC	1,00	2	OK
			on device and PC	1,00	3	OK
			on device and PC	2,00		OK
			on device and PC	5,00		OK
			on device and PC	10,00		OK
			on device and PC	20,00		OK
			on device and PC	50,00		OK
			on device and PC	100,00		OK

## 4.1 SELECT CURRENCIES

Select a currency to adjust in the first column *Currency*.

## 4.2 ADJUST CURRENCY DENOMINATIONS

After selecting a currency, the currency denomination data is viewed in the 2nd column.

EUR European euro							Other value	
Den	Status	Value	Weight (g)	Custom name	Pack.	amount	Value	Description
	on device and PC	0,01	OK		Roll	50		
	on device and PC	0,02	OK		Roll	50		
	on device and PC	0,05	OK		Roll	50		
	on device and PC	0,10	OK		Roll	40		
	on device and PC	0,20	OK		Roll	40		
	on device and PC	0,50	OK		Roll	40		
	on device and PC	1,00	OK		Roll	25		
	on device and PC	2,00	OK		Roll	25		
	on device and PC	5,00	OK					
	on device and PC	10,00	OK					
	on device and PC	20,00	OK					
	on device and PC	50,00	OK					
	on device and PC	100,00	OK					
	on device and PC	200,00	OK					
	on device and PC	500,00	OK					

☒ View currencies with official weights only

Open denomination data (double-click or press the adjust denomination key). The Denomination settings pop-up appears...

Denomination settings

Fill in weight for 0,01 EUR

Weight (g)  Default weight

Show denomination

Custom name

Package  #

Full package weight (g)

OK Cancel

**Weight (g):** Fill in a new weight. Press [Default weight] to reset back to official weight.

**Show denomination:** Select in this box the following options.

*On device and PC:* View denomination on Safescan device and PC.

*On PC:* View denomination only on PC. The denomination will set Off on the Safescan device.

*Never:* Set Off the denomination on the Safescan device and PC.

**Custom name:** Enter denomination name. For example 1ct. (This name will be shown on the count results sheet)

**Package:** Select type of coin or banknote package (coin roll, coin bag or banknote clip).

**#:** Enter amount of coins/banknotes per package.

 
**Full package weight:** Fill in the total weight of the full money package (including the amount of coins/banknotes as set above). Use the weighing function of the device to define the weight of the full package. (Press [+] key for 3 seconds to activate the weighing function)

**Warning:** **For accurate counting results, make sure you weigh only packages which are undamaged and are filled with the correct amount of coins/banknotes as set above.**

## 5.0 REMOVING INSTALLATION

Select the Safescan counting software in the [Start Menu\_All programs] and select [Uninstall]

A warning pop-up appears:

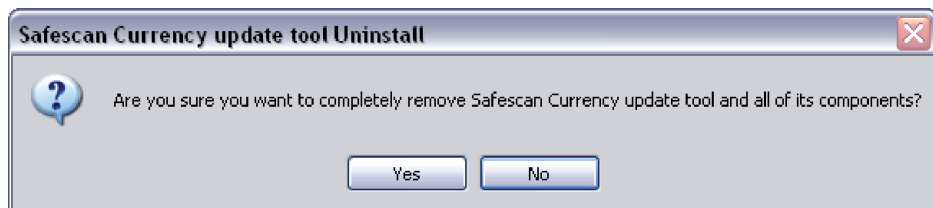

Press [NO] to cancel uninstalling the software.

Press [YES] to proceed uninstalling the software.

When the software is uninstalled a next pop-up appears:



Press [OK] to finish uninstalling.

## 6.0 TECHNICAL SUPPORT

Contact the Safescan for assistance : [www.safescan.com](http://www.safescan.com)



[www.safescan.com](http://www.safescan.com)